




CLEMS ELECTRICAL

HOW TO PROGRAM YOUR HOT WATER AND POOL TIMER



- Segments are pushed right or left to set on-off times
Segments left = timer ON
Segments right = timer off

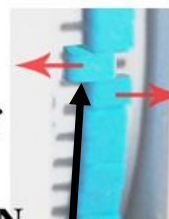

- Rotate dial with thumb to set current time

Each segment is 15 minutes

Match the actual time with the arrow pointing to the time

Override timer by selecting the lever indicated to the "I" position by pushing the lever down- *this will allow you to clean the pool or heat more water when the timers is off.*

To set the timer back to its original time settings pre-selected, simply push the lever indicated in an upwards motion – *to the "AUTO" position*